

## MyTVs Application

Your mobile device can be used as a remote to control your STB (set top box), manage your DVR, view Channel Guide and more. Download the MyTVs app from the Apple App Store or Google Play Store. Open the App and select Add New Account.



Follow the instruction to perform on your STB: Press the **Menu** button on your remote to display the Menu, on the Settings tab press **Right** or **OK** then press **Up** or **Down** to Device Code tab and press **OK**.

Enter the displayed Login into your mobile device and select **Pair Device** then enter in the Passphrase and select **Pair Device**. It will ask for an Account name and press **OK**.

## FAVORITES

Predefined Favorites lists include: All, Subscribed, SD, HD, Movies, Music, Sports, your custom list and more.

You can create your own Favorites list in the Menu.

While the Guide is displayed, press the **Blue** button repeatedly to cycle through the Favorites lists. Example: All Channels– displays all channels. The Guide will only show the channels of the active Favorites list.

## AUTO STANDBY (Sleep mode)

The Set Top Box by default will enter standby mode after 4 hours. To disable this feature press the **Menu** button, press **Down** to Settings then press **Right** or **OK**. Then press **Down** to Display then Press **OK**. Next press **Down** to Auto Standby then press **Right** or **Left** to Disabled and then **Down** to Save and press **OK**.



For additional TV Information  
visit our website [www.swiftel.tv](http://www.swiftel.tv)

*Round-The-Clock Support*

**605-696-HELP(4357)**

24-hours a day, 7-days a week

**Swiftel**  
VOICE • VIDEO • DATA

415 4<sup>th</sup> St, Brookings  
605-692-6211



February 8, 2023

# Swiftel TELEVISION


## Quick Start Guide



Connecting people with  
fun and entertainment.

## MENU

A quick way to access most of the features of your service. Press the **Menu** button on your remote to display the Menu. Then use your arrow keys to move through the menu to select a feature icon. Then press **OK** to select it. These icons include: TV, Recordings, Phone, Apps and Settings.

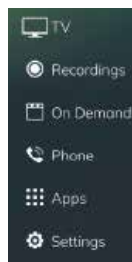


## INFOBAR



An easy way to find information about the show you are watching, what comes on later, and what is on other channels. Press **Info** on your remote to view more information about a program you are viewing. When viewing the Info screen, press the **Up** and **Down** arrows to scroll the Infobar through what is playing on other channels. Press the **Right Arrow** key to scroll ahead in time. Pressing **Info** a second time brings up more detailed information.

## GUIDE

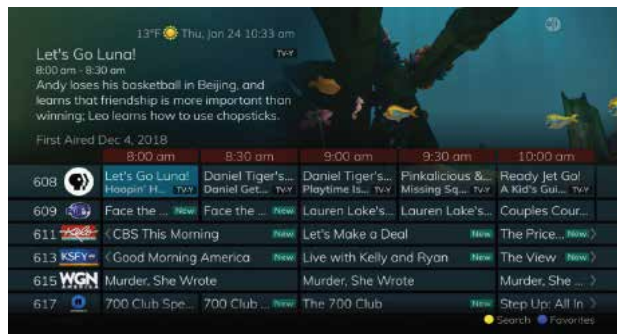

The place to find out what is playing now and later. where you can set reminders, recordings and edit your recordings.

To access the guide press the the **Guide** button on your remote control. Then you can use your remote to tune to channels by entering your channel number(s) on your number keypad.

Enter your channel number on your keypad or use your arrow keys to scroll through the guide. Then press **OK** to preview the view the program on the upper-right corner of your TV screen. Press **Exit** to tune to the channel.

**TIP:** To skip a page ahead or back in the guide press the **Fast Forward** or **Rewind** on the Remote Control.

## RECORDING

To record the program your are watching press the **Record** button on the remote control. To schedule future recordings access the guide.



**TIP:** Four programs can be recorded at the same time.

To access recorded programs press **Menu** on the remote, scroll Down to Recordings and press **OK**. Some remotes have a DVR or List button. *(Requires DVR Service)*

## PAUSE LIVE TV

As you watch live TV or recorded programs, press the Pause button and the programming on the screen instantly freezes. Press the Play button to resume normal play of the program from the point where it was paused. *(Not all channels support this feature)*

## New Feature: RESTART TV

To watch a program from the beginning press **Guide** on the remote control then press the **Green** button.

Supported channels will display a green dot located at the bottom of the guide with a label with Watch from Start. *(Not all channels support this feature)*


## SEARCH

Allows you to enter the title or partial title of a program and find any program matching the text you entered. To access the search options press the Menu button on your remote. Search is located under the TV tab.

**TIP:** The Search History feature will allow you to save your searches so that they can be used again at a later time. Up to 18 searches may be retained in the Search History at any given time.

## PARENTAL CONTROLS

Press the **Menu** button on your remote to display the Menu, on the Settings tab press **Right** or **OK** then press **Up** or **Down** to Parental tab and press right or **OK**.

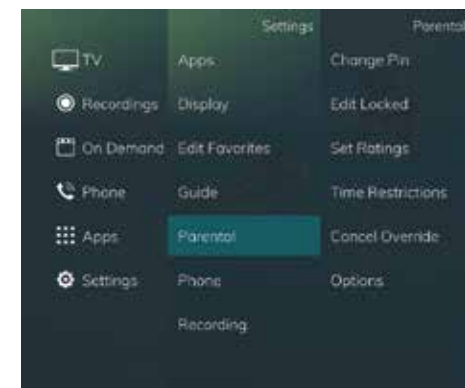

From here you can change PIN numbers (Default: 0000), Edit Locked, Set Ratings, Setup Time Restrictions, Cancel Override and additional Options.

## CALLER ID

Displays the incoming caller's name and phone number on your television screen.

Press the **Menu** Button and press Down to Phone. From here you can see recent messages, Recent Calls and Options. Options allows setting the Caller ID Pop-up Time.

While watching a program pressing the **Green** button on the remote displays Recent Calls.

*(Requires Caller ID Service)*



For additional Remote Control programming visit [www.swiftel.net](http://www.swiftel.net).